



# **ZTE WP850**

## **CDMA Wireless Phone**

### **User Guide**

#### **ZTE CORPORATION**

NO. 55, Hi-tech Road South, ShenZhen, P.R.China

Postcode: 518057

Tel: (86) 755 26779999

URL: <http://www.ztedevice.com>

E-mail: [mobile@zte.com.cn](mailto:mobile@zte.com.cn)

# LEGAL INFORMATION

Copyright © 2013 ZTE CORPORATION.

All rights reserved.

No part of this publication may be excerpted, reproduced, translated or utilized in any form or by any means, electronic or mechanical, including photocopying and microfilm, without the prior written permission of ZTE Corporation.

The manual is published by ZTE Corporation. We reserve the right to make modifications on print errors or update specifications without prior notice.


Version No. : R1.0

Edition Time : 2013.09

Manual No. : 079584505980

# Chapter 1

## Know Your Phone

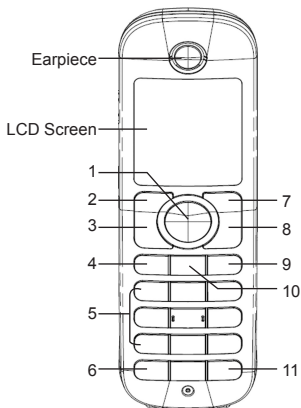

**There are two ZTE WP850 models. One needs UIM card inserted in, the other does not need.**

**Section or function marked with “★” is only available to the model with UIM card. Otherwise, it is available to both models.**

# Chapter 2

## Key Instruction

Key	Description
<b>1, 3, 8: Scrolling keys (Up/Down/Left/Right key)</b>	<ul style="list-style-type: none"><li>• Press these keys to scroll cursor to the left, right, up or down when inputting characters or selecting items.</li></ul>
<b>2: Left select key</b>	<ul style="list-style-type: none"><li>• Enter main menu.</li><li>• Select or confirm options in menu.</li><li>• Enter the left-bottom menu.</li></ul>
<b>4: CALL/REDIAL key</b>	<ul style="list-style-type: none"><li>• Make a call or answer an incoming call.</li><li>• In standby mode, press this key to enter recent calls list.</li></ul>
<b>5: Number keys</b>	<ul style="list-style-type: none"><li>• Input numbers and characters.</li></ul>
<b>6, 11: * key, # key</b>	<ul style="list-style-type: none"><li>• Perform different functions under different conditions.</li></ul>







<b>7: Right select key</b>	<ul style="list-style-type: none"> <li>• Enter right-bottom submenu on the screen.</li> <li>• Erase character(s) while editing text.</li> <li>• Return to the previous page during menu navigation.</li> </ul>
<b>9: End key</b>	<ul style="list-style-type: none"> <li>• End an active call or reject a call.</li> <li>• Hold this key to Power on/Power off the phone.</li> <li>• Exit from any interface to standby mode.</li> </ul>
<b>10: OK key</b>	<ul style="list-style-type: none"> <li>• Confirm the commands and options selected.</li> <li>• Confirm the characters inputting.</li> </ul>

#### Notes:

In this guide, “press” a key means to press the key once, “hold” a key means to press the key for 2 or 3 seconds.

## Chapter 3

### Interface Icons

Icon	Description	Icon	Description
	Signal strength		New message
	Silent		Roaming
	Power indicator		Alarm clock

## Chapter 4

### Installation

#### 1. Charge the battery

- Connect the desk charger and external AC socket via power adapter.
- Put the phone on the desk charger. The charge spring of the desk charger should be inserted in the apertures at the bottom of the phone.

- Meanwhile, power indicator in the upper-right corner of the display blinks, indicating the charging is in progress. While charging in power-off mode, the display only shows the charge indicator. If the battery is completely flat, it may take a while before the charge indicator appears on the display.
- When the power indicator on the screen stops blinking, the charging is completed. The normal charging time is 4 hours. In the process of charging, it is a normal phenomenon that the battery, phone and charger get hot.
- After the completion of charging, disconnect the charger from the phone and AC socket.

Note:

- When charging the battery, place the phone in an environment with good ventilation and temperature between 0°C ~ +45°C. Make sure to use the charger offered by the phone manufacturer. Using unauthorized charger may cause danger and violate the guarantee articles.

- When the phone is automatically switched off or indicates power shortage, charge the battery in time.
- The standby time and the talk time of the phone are based on ideal working environment. In practice, the working time of battery varies with network condition, working environment and application methods.

## **2. ★ UIM Card**

- Power off the phone and remove other external power.
- Take off the back cover and remove the battery of the phone.
- Insert UIM card into UIM card slot in the phone or pull out UIM card out of slot.
- Direct the back cover towards the locking catches on the both sides of the phone and push the back cover of the phone upward to lock the cover into its place.



## Chapter 5

### How to Power On/Off

- Hold the **End key** to power on the phone.
- When the phone is powered on, hold the **End key** to power off the phone.

## Chapter 6

### How to Make a Call

1. Enter the telephone number.

Add the international prefix, country code and area code (without the leading 0) before the number when making an international call.

2. Press the **CALL/REDIAL key** to make the call.

**Note:** If required, hold the **0 key** for the international prefix “+”, or input international prefix e.g. “00” directly.

# Chapter 7

## Messages

Select **Menu**→**Messages**.

- Select **New Message** to create new message: key in receiver's phone number or press **OK key** to select from **Contacts** list, press **Down key** to input message text, Press **OK key** to send the message.
- Select **Voice Mail** to listen to voicemail messages.
- Select **Inbox** to view messages received.
- Select **Drafts** to view draft you saved.
- Select **Outbox** to view the stored messages.
- Select **Sent** to view the sent messages.
- Select **Message Settings** to change Messages settings.
- Select **Message Template** to view or edit the default text.
- Select **Delete Message** to delete certain messages.
- Select **Memory Status** to view the memory information of messages box.

## Chapter 8

### How to Access Network

1. Connect the phone and the computer with the USB data cable.
2. Install the ZTE dial-up software **JoinME**.
3. You can access network by **JoinME**.

## Chapter 9

### Phone Code

Phone code could prevent your phone from illegal using. The default handset password is 0000. Change it to your own phone password as soon as possible.

Notes: Remember the handset password, otherwise some service expense may happen.

## Chapter 10

### ★ PIN Code and PUK Code

Notes: PIN code and PUK code may be offered together with the UIM card. If not, please contact with network operator. Change default PIN code to your own as soon as possible.

**PIN code:** PIN code could prevent your phone from illegal use. When you activate it, you should input the PIN code when turning on the phone.

**PUK code:** The UIM card will be locked if you enter a wrong PIN code consecutively for three times. You need PUK code to unlock it.

# Chapter 11

## Text Input

Operation	Method
Input Letters	Multitap Input — “ <b>Abc/abc/ABC</b> ” press corresponding letter key till the letter appears.
Input Words	eZiText Input — “ <b>eZi</b> ”, press any key once to key in any word.
Input Digits	Numbers Input — “ <b>123</b> ”, press digital key once.
Input Symbol	Symbols Input — Press * <b>key</b> to enter the symbols mode and press corresponding digital key. Or press “ <b>1</b> ” <b>key</b> till the symbol (common symbols) appears except for numbers input mode.

Input Space	Press “ <b>0</b> ” <b>key</b> , except for the numbers input mode.
Erase Character	Press <b>Right select key</b> .
Move cursor	Press <b>Scrolling keys</b> .
Change input mode	Press <b># key</b> to select another text mode.

# Chapter 12

## Menu Function

The contents in the following table briefly describe the functions of the phone.

Function	Selection	Description
Add Contact	Menu→Contacts →Add Contact	Add a new contact to the phone or the UIM card (★).
All List	Menu→Contacts →All List	View all the contacts in the phone or UIM card (★).
Groups	Menu→Contacts →Groups	View the Group's name and change some related settings about the group.
Speed Dial	Menu→Contacts →Speed Dial	Call a contact by holding a number key for a few seconds.

<b>Function</b>	<b>Selection</b>	<b>Description</b>
Memory Status	Menu→Contacts →Memory Status	Check the storage information about the phone or UIM card (★).
Call History	Menu→Call History →Call History	View the call history.
Call Duration	Menu→Call History →Call Duration	View the dialed/answered/all calls' time, and you can also clear the call time.
Profile	Menu→Profile	Select and modify the phone profile.
Display Settings	Menu→Settings →Display Settings	You can change the settings of screen, banner or keypad light.
Phone Settings	Menu→Settings →Phone Settings	Set the phone or view the version information of the phone.
Call Settings	Menu→Settings →Call Settings	Make the call settings.



<b>Function</b>	<b>Selection</b>	<b>Description</b>
Time & Date Settings	Menu→Settings →Time & Date Settings	Set the time and date format.
Security Settings	Menu→Settings →Security Settings	Change the settings about the phone code or PIN code (★), restore factory settings and clear user data.
Alarm	Menu→Alarm	Set reminder time.
Calendar	Menu→Calendar	View the date, and check/create a task that relates with the date.
Magic Box	Menu→Magic Box	Use the tools in magic box.

# Chapter 13

## To the Owner

- Some electronic devices are susceptible to electromagnetic interference sent by phone if inadequately shielded. Use phone at least 20 cm or as far away as you can from TV sets, radio and other automated office equipment so as to avoid electromagnetic interference.
- Operating phone may interfere with medical devices like hearing aids and pacemakers, or other medical devices in hospital. Consult a physician or the manufacturer of the medical device before using phone.
- Be aware of the usage limitation when using phone at places such as oil warehouses, or chemical factories, where there are explosive gases or explosive products being processed, because even if your phone is in idle state, it still transmits radio frequency (RF) energy. Therefore, power off your phone if required.
- Keep out of the reach of small children. Phone may cause injury if used as a toy.
- Do not put other things on the terminal to avoid overlaying radiator.

## Phone Use

- Please use original accessories or accessories that are authorized by the manufacturer. Using any unauthorized accessories may affect your phone's performance, and violate related national regulations about telecom terminals, or even endanger your body.
- As your phone can produce electromagnetic field, do not place it near magnetic items such as computer disks.
- Do not expose your phone to direct sunlight or store it in hot areas. High temperatures can shorten the life of electronic devices.
- Prevent liquid from leaking into your phone.
- Disconnect external power supply and do not use your phone during thunderstorm.
- Unplug the external power adapter or remove battery when your phone is not in use, esp. for a long period of time.
- It is highly recommended to charge the battery before initial use. The battery might have been discharged during storage and delivery.

- Do not unplug the connector of the data cable from phone, and not install or remove battery, when the power is on.
- Keep phone power on and in service area when make emergency call. Enter emergency call number in status of standby, and then press Call key to send.
- Do not attempt to disassemble the phone by yourself. Non-expert handling of the devices may damage them.

## **Battery Use**

- Do not short-circuit the battery, as this can cause excessive heat and fire.
- Do not store battery in hot areas or dispose of it in a fire to avoid explosion.
- Never use any charger or battery damaged or worn out.
- Return the wear-out battery to the provider or put it in the appointed recycle place. Do not put it in familial rubbish.

**Warning:** If the battery is broken, keep away from substance inside. If it taints your skin, wash your skin with abundant fresh water and ask doctor for help if necessary.

## **Safety and General Use in Vehicles**

- Before making or answering a call, you should pay attention to the local laws about using wireless mobile phones and take them into account in practical use.
- Safety airbag, brake, speed control system and oil eject system shouldn't be affected by wireless transmitting. If you do meet problems above, contact your automobile provider.
- Power off your mobile phone when refueling your automobile, and so do the place where duplex wireless equipments are banned. Don't put your phone together with flammable or explosive items, inner spark may cause fire.

## **Cleaning and Maintenance**

- The phone is non-waterproof, keep it dry and store in shaded and cool place.
- If you want to clean your phone, use clean fabric that is a bit wet or anti-static. Do not use harsh chemical cleaning solvents or strong detergents to clean your phone such as alcohol, dilution agent and benzene. Power-off your phone before you clean it.
- Use phone within a temperature range of  $-10^{\circ}\text{C}\sim+55^{\circ}\text{C}$  and the humidity less than 95%.

# **Chapter 14**

## **Limited Warranty**

The warranty does not apply to defects or errors in the product caused by:

- (a) Reasonable abrasion.
- (b) Misuse including mishandling, physical damage, improper installation, unauthorized disassembly of the product.
- (c) Water or any other liquid damage.
- (d) Any unauthorized repair or modification.
- (e) Power surges, lightning damage, fire, flood or other events outside ZTE's reasonable control.
- (f) Use of the product with any unauthorized third party products such as generic chargers.
- (g) Any other cause beyond the range of normal usage for products.

End User shall have no right to reject, return, or receive a refund for any product from ZTE under the above-mentioned situations.

This warranty is end user's sole remedy and ZTE's sole liability for defective or nonconforming items, and is in lieu of all other warranties, expressed, implied or statutory, including but not limited to the implied warranties of merchantability and fitness for a particular purpose, unless otherwise required under the mandatory provisions of the law.

## **Chapter 15**

### **Limitation of Liability**

ZTE shall not be liable for any loss of profits or indirect, special, incidental or consequential damages resulting from or arising out of or in connection with using of this product, whether or not ZTE had been advised, knew or should have known of the possibility of such damages, including, but not limited to lost profits, interruption of business, cost of capital, cost of substitute facilities or product, or any downtime cost.



# Chapter 16

## Troubleshooting

If your phone appears following phenomenon in the process of operation, please read following relative information at first. If the problems still can not be solved, please contact the distributor or service provider.

<b>Problem</b>	<b>Check Point</b>
When switching on the phone, it prompts “Enter phone password”.	Enter phone code you set already to unlock the phone.
Incorrect display of system time.	Check whether the system signal is too weak.
No corresponding response when press the phone keys (after several attempts).	Restart the phone.
No display on screen when disconnect external power supply.	Check whether the battery has electricity or it is damaged, or restart the phone.

There is incoming call, but no prompt ring tone.	Check the silent mode and the volume of ring tone.
There is no prompt tone when the alarm clock has reached the time.	Check whether the alarm clock is enabled or not.
Cannot send short message.	Check the network condition.
Other abnormal phenomenon.	Please first refer to user guide, then check whether the power is connected correctly or not, if there is no problem, please restart the phone.

عدم الحصول على الاستجابة المتوقعة عند الضغط على مفاتيح الهاتف (بعد عدة محاولات).	إعادة تشغيل الهاتف.
لا يوجد عرض على الشاشة عند فصل مصدر الطاقة الخارجية.	تحقق ما إذا كانت البطارية بها كهرباء أو أنها تالفة أو قم بإعادة تشغيل الهاتف.
مكالمة واردة ولكن لا توجد نغمة رنين.	تحقق من الوضع الصامت ومستوى نغمة الرنين.
لا توجد نغمة للمنبه وقد بلغ ذلك الوقت.	تحقق ما إذا تم تمكين المنبه أو لا.
لا يمكن إرسال رسالة قصيرة.	تحقق من حالة الشبكة.
ظواهر أخرى غير طبيعية.	يرجى الرجوع إلى دليل المستخدم أولاً، ثم تحقق ما إذا كان تم توصيل الكهرباء بشكل صحيح أم لا، وإذا لم يكن هناك مشكلة يرجى إعادة تشغيل الهاتف.

## الفصل الخامس عشر

### حدود المسؤولية

شركة ZTE لا تكون مسؤولة عن أي خسارة في الأرباح أو الأضرار غير المباشرة أو الخاصة أو العرضية أو التبعية الناتجة عن أو الناشئة عن أو فيما يتعلق باستخدام هذا المنتج، سواء نصحت شركة ZTE أو علمت أو فرض أن يكون على علم بإمكانية حدوث مثل هذه الأضرار بما في ذلك ولكن لا تقتصر على خسارة الأرباح أو انقطاع الأعمال التجارية وتكلفة رأس المال وتكلفة مرافق بديلة أو منتجات أو أي تكاليف ناجمة عن التوقف.

## الفصل السادس عشر

### استكشاف الأخطاء وإصلاحها

إذا ظهرت بالهاتف أي أعطاب ظاهرة في عملية التشغيل يرجى قراءة المعلومات التالية أولاً، إذا كانت المشاكل لا تزال لا يمكن حلها يرجى الاتصال مع الموزع أو مزود الخدمة.

المشكلة	التحقق
عند تشغيل الهاتف فإنه يطلب "أدخل كلمة سر الهاتف".	أدخل رمز الهاتف الذي قمت بتعيينه بالفعل لفتح الهاتف
عرض غير صحيح لوقت النظام.	تحقق ما إذا كانت الإشارات ضعيفة جداً.

## الفصل الرابع عشر

### الضمان المحدود

لا ينطبق الضمان على عيوب أو أخطاء في المنتج الناجمة عن:  
(أ) التآكل المعقول.

(ب) إساءة الاستخدام بما في ذلك الخشونة والأضرار المادية وتركيب غير الصحيح والتفكيك غير المصرح به للمنتج.

(ج) الماء أو أي سوائل أخرى.

(د) أي إصلاح أو تعديل غير مصرح به.

(هـ) قوة العواصف وضرر البرق والحرائق والفيضانات أو غيرها من الأحداث خارج السيطرة المعقولة لشركة ZTE.

(و) استخدام المنتج مع أي منتجات طرف ثالث غير مصرح بها مثل أجهزة الشحن عام.

(ز) أي سبب آخر خارج نطاق الاستخدام العادي للمنتجات.

ليس للمستخدم الحق في رفض أو إعادة المنتج أو استرجاع المال عن أي منتج من شركة ZTE في ظل الأوضاع المذكورة أعلاه.

هذا الضمان للمستخدم النهائي ومسؤولية شركة ZTE الوحيدة للسلع المعيبة أو غير المطابقة وذلك بدلا من جميع الضمانات الأخرى الصريحة أو الضمنية أو القانونية بما في ذلك على سبيل المثال لا الحصر الضمانات الضمنية للرواج والصلاحية لغرض معين إلا إذا على خلاف المطلوب بموجب أحكام إلزامية القانون.

## السلامة والاستخدام العام في المركبات

- قبل إجراء المكالمات أو الرد على مكالمات يجب أن تتنبه للقوانين المحلية حول استخدام الهواتف المحمولة اللاسلكية وأخذها في الاعتبار في الاستخدام العملي.
- الوسادة الهوائية والفرامل ونظام التحكم في السرعة ونظام إخراج الزيت لا ينبغي أن تتأثر عن طريق بث لاسلكي وإذا كنت تواجه المشاكل المذكورة أعلاه يرجى الاتصال بمزود السيارات الخاصة بك.
- أقفل هاتفك المحمول عند التزود بالوقود وكذلك في الأماكن التي يتم فيها حظر المعدات اللاسلكية ثنائية التراسل، لا تضع هاتفك جنباً إلى جنب مع العناصر القابلة للاشتعال أو المتفجرة، الشرارة الداخلية قد تسبب الحريق.

## التنظيف والصيانة

- الهاتف غير مقاوم للماء، أبقه جافاً وخزنه في مكان ظليل وبارد.
- إذا كنت تريد تنظيف هاتفك، استخدم قماش نظيف رطب قليلاً أو مضاد للكهربية الساكنة ولا تستخدم مواد التنظيف الكيميائية القاسية أو المنظفات القوية لتنظيف هاتفك مثل الكحول والبنزين، افصل التيار الكهربائي عن هاتفك قبل تنظيفه.
- استخدم الهاتف في درجة حرارة تتراوح من -10°م ~ 55°م والرطوبة أقل من 95%.

- لا تعرض هاتفك لأشعة الشمس المباشرة أو تخزنه في المناطق الساخنة فإن درجات الحرارة العالية قد تقصر من عمر الأجهزة الإلكترونية.
- امنع السائل من التسرب إلى هاتفك.
- قم بفصل التيار الكهربائي الخارجي وعدم استخدام الهاتف أثناء العواصف الرعدية.
- افصل محول الطاقة الخارجي أو أزل البطارية عندما لا يكون الهاتف قيد الاستعمال لفترة طويلة من الزمن.
- من المستحسن شحن البطارية قبل الاستخدام الأول فإن البطارية فارغة أثناء التخزين والتسليم.
- لا تفصل موصل كابل البيانات من الهاتف ولا تثبت أو تزيل البطارية عند اتصاله بالتيار الكهربائي.
- حافظ على الهاتف في وضع التشغيل و في منطقة الخدمة عند إجراء مكالمات طوارئ، قم بإدخال رقم مكالمات الطوارئ في وضع الاستعداد ثم اضغط على مفتاح الاتصال لإرسالها.
- لا تحاول فك الهاتف، التعامل مع الأجهزة من غير الخبراء قد يؤدي إلى تلفها.

## استخدام البطارية

- لا تحدث تلامسا في الدائرة الكهربائية للبطارية، فهذا يمكن أن يسبب الحرارة المفرطة والحرق.
- لا تخزن البطارية في أماكن ساخنة أو تتخلص منها بإلقائها في النار لتفادي الانفجار.
- لا تستعمل أي جهاز شحن أو بطارية تالفة أو بالية.
- أرجع البطارية المتأكلة إلى المزود أو ضعها في مكان المحذوفات المحدد، لا تضعها في القمامة.
- تحذير : إذا تم كسر البطارية ابتعد عن المواد الداخلية، إذا لمست جلدك قم بغسل الجلد بكمية وفيرة من المياه العذبة و اطلب الطبيب للحصول على مساعدة إذا لزم الأمر.

## الفصل الثالث عشر

### إلى المالك

- بعض الأجهزة الإلكترونية عرضة للتداخل الكهرومغناطيسي المرسل بواسطة الهاتف إذا كانت غير محمية بصورة كافية، استخدم الهاتف على بعد 20 سم أو أبعد من أجهزة التلفزيون والإذاعة وغيرها من المعدات المكتبية الآلية وذلك لتجنب التداخل الكهرومغناطيسي.
- تشغيل الهاتف قد يؤدي إلى التداخل مع الأجهزة الطبية مثل أجهزة ضبط نبضات القلب والسمع أو الأجهزة الطبية الأخرى في المستشفى، استشر الطبيب أو الشركة المنتجة للمعدات الطبية قبل استخدام الهاتف.
- كن على بينة من قيود الاستخدام عند استخدام الهاتف في أماكن مثل مستودعات النفط أو المصانع الكيميائية التي توجد فيها غازات متفجرة أو المنتجات المتفجرة التي يجري تجهيزها لأنه حتى لو كان هاتفك في حالة خمول فإنه لا يزال ينقل ترددات الراديو (RF) وبالتالي أقفل هاتفك إذا لزم الأمر.
- احتفظ بالهاتف بعيدا عن متناول الأطفال، فالهاتف يمكن أن يسبب إصابات إذا استخدم كلعبة.
- لا تضع أي شيء على المحطة الطرفية لتجنب تغشية المبرد.

### استخدام الهاتف

- الرجاء استخدام الملحقات الأصلية أو الملحقات التي يوفرها الوكيل المعتمد من قبل الصانع. إن استخدام أي ملحقات غير المصرح بها قد يؤثر على أداء هاتفك، وتنتهك اللوائح الوطنية ذات الصلة حول المحطات الطرفية للاتصالات أو حتى تعريض جسمك للخطر.
- كما يمكن أن ينتج هاتفك مجالا كهرومغناطيسيا، لا تضعه بالقرب من البنود المغناطيسية مثل أقراص الحاسوب.



عرض وقت جميع المكالمات الصادرة / الواردة / كل المكالمات، يمكنك أيضا مسح وقت المكالمة.	القائمة ← سجل المكالمات ← مدة المكالمة	مدة المكالمات
اختيار وتعديل الملف الشخصي للهاتف.	القائمة ← الملف الشخصي	الملف الشخصي
يمكنك تغيير إعدادات الشاشة أو الشعار أو ضوء لوحة المفاتيح.	القائمة ← إعدادات إعدادات العرض	إعدادات العرض
ضبط الهاتف أو عرض معلومات إصدار الهاتف.	القائمة ← إعدادات إعدادات الهاتف	إعدادات الهاتف
ضبط المكالمات.	القائمة ← إعدادات إعدادات المكالمة	إعدادات المكالمة
ضبط الوقت وتنسيق التاريخ.	القائمة ← إعدادات إعدادات الوقت والتاريخ	إعدادات الوقت والتاريخ
تغيير إعدادات الهاتف / رمز PIN (★) واستعادة ضبط المصنع ومحو بيانات المستخدم.	القائمة ← إعدادات إعدادات الحماية	إعدادات الحماية
تعيين وقت التذكير.	القائمة ← المنبه	المنبه
استخدام الآلة الحاسبة للحساب.	القائمة ← الآلة الحاسبة	الآلة الحاسبة
استخدام الأدوات لصندوق الأدوات	القائمة ← صندوق الأدوات	صندوق الأدوات

## الفصل الثاني عشر

### قائمة الوظيفة

محتويات الجدول التالي تصف وظائف الهاتف بإيجاز.

الوظيفة	الاختيار	الوصف
إضافة اسم	القائمة ← جهات الاتصال ← إضافة اسم	إضافة جهة اتصال جديدة إلى الهاتف أو بطاقة UIM (★).
قائمة الكل	القائمة ← جهات الاتصال ← الكل	عرض كافة جهات الاتصال في الهاتف أو بطاقة UIM (★).
المجموعات	القائمة ← جهات الاتصال ← المجموعات	عرض اسم المجموعة وتغيير بعض الإعدادات ذات الصلة بالمجموعة.
الاتصال السريع	القائمة ← جهات الاتصال ← الطلب السريع	الاتصال بجهة اتصال من خلال الضغط على مفتاح الرقم لبضع ثوان.
حالة الذاكرة	القائمة ← جهات الاتصال ← حالة الذاكرة	تحقق من تخزين المعلومات حول الهاتف أو بطاقة UIM (★).
سجل المكالمات	القائمة ← سجل المكالمات ← سجل المكالمات	عرض سجل المكالمات.

## الفصل الحادى عشر

### نص الإدخال

العملية	الطريقة
إدخال الحروف	مدخلات النقر المتعدد - "Abc / abc / ABC" اضغط على المفتاح الخاص بالحرف حتى يظهر الحرف.
إدخال كلمات	إدخال eZiText - اضغط على أي مفتاح مرة واحدة لإدخال أي كلمة.
إدخال الأرقام	إدخال الأرقام - "123"، اضغط على مفتاح رقمي واحد.
إدخال رمز	إدخال الرموز - اضغط على مفتاح * للدخول إلى وضع الرموز واضغط مفتاح الرقم المقابل. أو اضغط على مفتاح "1" حتى الرمز (الرموز المشتركة) تظهر باستثناء أرقام وضع الإدخال.
إدخال مسافة	اضغط على "0" باستثناء وضع إدخال الأرقام.
محو حرف	اضغط على CLR / مفتاح العودة.
تحريك المؤشر	اضغط على مفاتيح التمرير.
تغيير وضع الإدخال	اضغط على مفتاح # لتحديد وضع نص آخر.

## الفصل التاسع

### رمز الهاتف

رمز الهاتف يمكن أن يحمي هاتفك من الاستخدام غير القانوني، كلمة المرور الافتراضية للهاتف هي 0000، قم بتغييرها إلى كلمة المرور الخاصة بك في أقرب وقت ممكن.

📖 ملاحظات :

تذكر كلمة المرور للهاتف وإلا قد تفقد بعض الخدمات.

## الفصل العاشر

### \* رمز PIN ورمز PUK

📖 ملاحظات :

يمكن أن تقدم رمز PIN ورمز PUK مع بطاقة UIM إذا لم يكن كذلك يرجى الاتصال بمشغل الشبكة وتغيير رمز PIN الافتراضي الخاص بك في أقرب وقت ممكن.

رمز PIN : الرقم السري يمكن أن يحمي الهاتف من الاستخدام غير المشروع، وعند تفعيله يجب عليك إدخال رمز PIN عند تشغيل الهاتف.

رمز PUK : يتم تأمين بطاقة UIM إذا قمت بإدخال رمز PIN خاطئ على التوالي ثلاث مرات وأنت بحاجة إلى رمز PUK لفتحه.

## الفصل السابع

### الرسائل

حدد من القائمة ← الرسائل

- اختر رسالة جديدة لإنشاء رسالة جديدة : أدخل رقم هاتف المتلقي أو اضغط على مفتاح OK لتحديده من قائمة جهات الاتصال واضغط على المفتاح الأسفل لإدخال نص الرسالة واضغط على مفتاح OK لإرسال الرسالة.
- اختر البريد الصوتي للحصول على رسائل البريد الصوتي.
- اختر صندوق الوارد لعرض الرسائل الواردة.
- اختر المسودات لعرض مسودات قمت بحفظها.
- اختر بريد صادر لعرض الرسائل المخزنة.
- اختر المرسلة لعرض الرسائل المرسلة.
- اختر إعدادات الرسائل لتعديل إعدادات الرسائل.
- اختر قوالب الرسائل لعرض النص الافتراضي أو تعديله.
- اختر مسح رسالة لمحو رسائل معينة.
- اختر حالة الذاكرة لعرض معلومات الذاكرة من مربع الرسالة.

## الفصل الثامن

### كيفية الدخول إلى الشبكة

- i. قم بتوصيل الهاتف والكمبيوتر باستخدام كابل بيانات USB.
- ii. قم بتنصيب برنامج الاتصال JoinME من شركة ZTE.
- iii. يمكنك الدخول إلى الشبكة من خلال JoinME.

- ★ شريحة UIM:
- أوقف تشغيل الهاتف و افصل الطاقة الخارجية الأخرى.
- أنزع الغطاء الخلفي و أخرج البطارية من الهاتف.
- أدخل بطاقة UIM في الفتحة الخاصة ببطاقة UIM من الهاتف أو اسحب بطاقة UIM خارج الفتحة.
- وجه الغطاء الخلفي نحو قوابض الإقفال على جانبي الهاتف و ادفع الغطاء الخلفي للهاتف إلى الأعلى لإقفال الغطاء في مكانه.

## الفصل الخامس

### كيفية التشغيل / الإيقاف

- اضغط على مفتاح الانهاء لتشغيل الهاتف.
- عندما يتم تشغيل الهاتف اضغط على مفتاح الانهاء لقفل الهاتف.

## الفصل السادس

### كيفية إجراء مكالمة

- 1- قم بإدخال رقم الهاتف.  
أضف البادئة الدولية، كود البلد و كود المنطقة (بدون الصفر الأول) قبل الرقم عند إجراء مكالمة دولية.
- 2- اضغط على المفتاح اتصال\إعادة الاتصال لإجراء المكالمة.  
ملاحظة: عند اللزوم؛ اضغط باستمرار على المفتاح 0 لإدخال البادئة الدولية +، أو أدخل البادئة الدولية 00 مباشرة.

## الفصل الرابع

### 1- شحن البطارية

- قم بتوصيل الشاحن المكتبي مع المقبس الخارجي للتيار المتردد عن طريق محول الطاقة.
- ضع جهاز الهاتف على الشاحن المكتبي، زنبرك الشحن للشاحن المكتبي يجب أن يتم إدخاله بالفتحات أسفل جهاز الهاتف.
- في غضون ذلك، يومض مؤشر الطاقة الموجود بالزاوية اليمنى العليا من شاشة العرض، مشيراً إلى تقدم عملية الشحن. أثناء الشحن في وضعية إيقاف التشغيل، توضح شاشة العرض فقط مؤشر الشحن. إذا كانت البطارية فارغة تماماً فإن مؤشر الشحن قد يأخذ وقتاً قبل أن يظهر على شاشة العرض.
- عندما يتوقف مؤشر الطاقة عن الوميض، تكون عملية الشحن قد اكتملت. الزمن الطبيعي للشحن هو 4 ساعات. أثناء عملية الشحن؛ من الطبيعي أن ترتفع درجة حرارة البطارية، الهاتف و الشاحن.
- بعد اكتمال عملية الشحن؛ افصل جهاز الشحن عن الهاتف و مقبس التيار المتردد.
- ملاحظات:
- أثناء شحن البطارية؛ ضع الهاتف في محيط ذي تهوية جيدة و درجة حرارة ما بين 0 م و +45 م، تأكد من استخدام الشاحن المقدم من مُصنّع الهاتف. إن استخدام الشاحن غير المصرح به يمكن أن يسبب الخطر و ينتهك بنود الضمان.
- عندما يُطفأ الهاتف أوتوماتيكياً أو يشير إلى نقص الطاقة، قم بشحن البطارية في الحال.
- زمن الاستعداد و زمن التحدث للهاتف مبنية على المحيط المثالي للتشغيل. من الناحية العملية؛ زمن التشغيل للبطارية يتغير مع ظروف الشبكة، محيط التشغيل و طرق التطبيق.

<ul style="list-style-type: none"> <li>◆ إنهاء مكالمة نشطة أو رفضها.</li> <li>◆ الاستمرار بالضغط على المفتاح لفتح / قفل الهاتف.</li> <li>◆ الخروج من أي واجهة إلى وضع الاستعداد.</li> </ul>	9. مفتاح الإنهاء
<ul style="list-style-type: none"> <li>◆ تأكيد الأوامر والخيارات المحددة.</li> <li>◆ تأكيد أحرف الإدخال.</li> </ul>	مفتاح OK

📖 ملاحظات :

في هذا الدليل "أضغط" المفتاح تعني أضغط المفتاح مرة واحدة و"استمر" تعني أضغط على مفتاح لمدة 2 أو 3 ثوان.

## الفصل الثالث

### أيقونات الواجهة

الوصف	الأيقونة	الوصف	الأيقونة
رسالة جديدة		قوة الإشارة	
التجول		وضع صامت	
المنبه		مؤشر الطاقة	




## الفصل الثاني

### تعليمات المفاتيح

مفتاح	الوصف
1,3,8, مفاتيح التمرير مفتاح (أعلى / أسفل / يسار / يمين)	◆ اضغط هذه المفاتيح لتمرير المؤشر إلى اليسار واليمين وللأعلى أو الأسفل، عند إدخال الأحرف أو اختيار العناصر.
2.مفتاح الاختيار الأيسر	◆ الدخول للقائمة الرئيسية. ◆ اختيار أو تأكيد الخيارات في القوائم. ◆ الدخول للقائمة الفرعية للزر الأيسر على الشاشة.
4.مفاتيح الاتصال / معاودة الاتصال	◆ إجراء مكالمة أو الرد على مكالمة واردة. ◆ في وضع الاستعداد اضغط على هذا المفتاح لدخول قائمة المكالمات الأخيرة.
5.مفاتيح الأرقام	◆ إدخال الأرقام والحروف.
6.مفتاح * و مفتاح #	◆ أداء وظائف مختلفة في ظروف مختلفة.
7.مفتاح التحديد اليمين	◆ الدخول للقائمة الفرعية بالزر الأيمن على الشاشة. ◆ نحو الحروف أثناء تحرير النص. ◆ العودة إلى الصفحة السابقة خلال تصفح القوائم.

## الفصل الأول

### تعرف على هاتفك

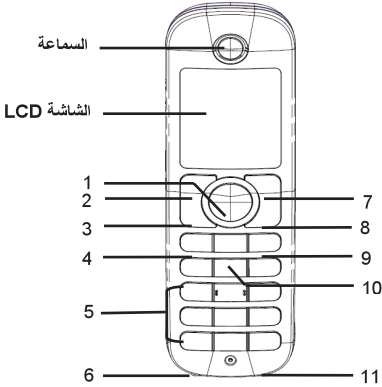

هناك نوعان من نموذج ZTE WP850 يحتاج الأول لإدراج بطاقة UIM، والآخر لا يحتاج.  
الفقرة أو الوظيفة المعلمة برمز " ★ " متاحة فقط بالنموذج مع بطاقة UIM، وإلا فهي متوفرة لكلا النموذجين.

# معلومات قانونية

حقوق الطبع والنشر © 2013 ZTE CORPORATION جميع الحقوق محفوظة.

لا يمكن اقتباس أو استنساخ أو ترجمة أو استخدام أي جزء من هذا المنشور في أي شكل أو بأي وسيلة سواء كانت إلكترونية أو ميكانيكية بما في ذلك التصوير والميكرو فيلم دون الحصول على إذن خطي مسبق من شركة ZTE.

يتم نشر الدليل من قبل شركة ZTE، نحن نحتفظ بالحق في إجراء تعديلات على أخطاء الطباعة أو مواصفات التحديث دون إشعار مسبق.

الإصدار رقم : R1.0

وقت الطبعة: 2013/09

رقم الدليل : 079584505980



**ZTE WP850**

**دليل المستخدم  
للهاتف اللاسلكي**

شركة زد تي إي

رقم 55، طريق الجنوب، شين جين، جمهورية الصين الشعبية

صندوق بريد : 518057

الهاتف : 75526779999 (86)

الموقع الإلكتروني : <http://www.ztedevice.com>

البريد الإلكتروني : [mobile@zte.com.cn](mailto:mobile@zte.com.cn)